



Let's Start by connecting your Roku player (This is for a ROKU2 your player might vary slightly)

Step 1: Connect one end to the HDMI port on the back of your Roku player. Connect the other end to an open HDMI port on your TV.

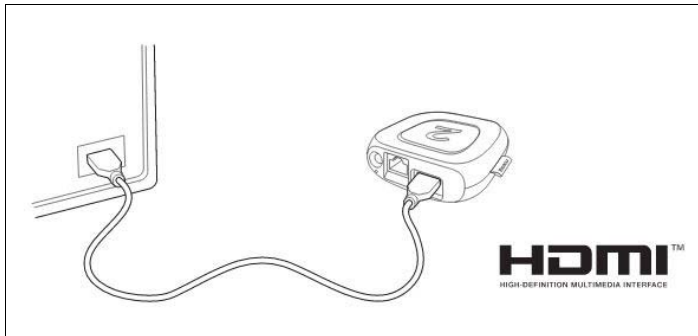

Step 2: Insert the power connector into the back of the Roku player, and connect the power adapter into a wall outlet.

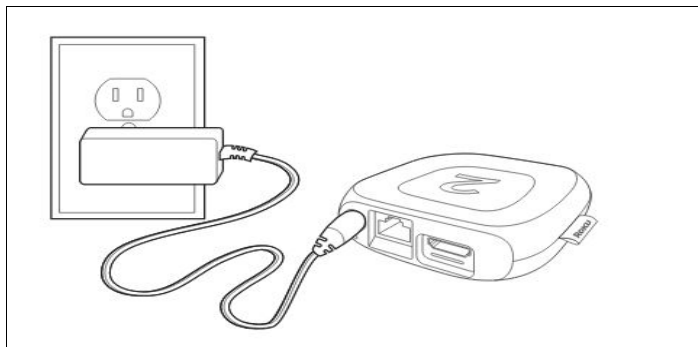

Step 3: Open the battery cover and insert the provided batteries.
Always insert the batteries (-) side first.



On Screen Setup



Here we go!

Don't see this screen on your TV?
Check the following:

- Power connection
- TV source or input
- HDMI cable connection

On Screen Setup continued...



Select a language



Click OK on the remote

On Screen Setup continued...



Connect to the network

Select Wireless or wired network type

You'll need your wireless password here if using wireless



Looking for wireless networks nearby

On Screen Setup continued...




Select your wireless network. Contact Reliance Connects if you are not sure which network is yours.



Enter your wireless password
Use Show password to see enter characters.

On Screen Setup continued...

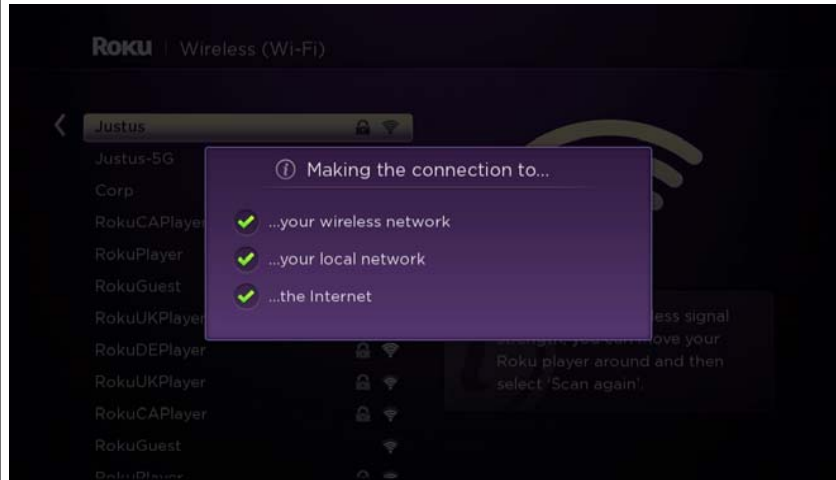

Look for green check marks.


If you see a red X. Go to www.roku.com for troubleshooting assistance or call Reliance Tech Support.




After first network connection, the Roku player will look for an available software update.

If one is found, click OK on remote to continue.

On Screen Setup. That's It!

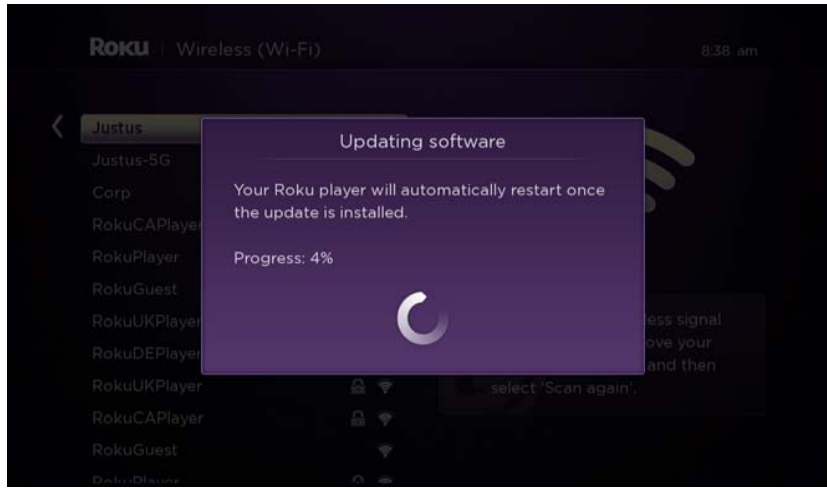

Software is downloading and will be automatically installed. The Roku player will restart after completion.

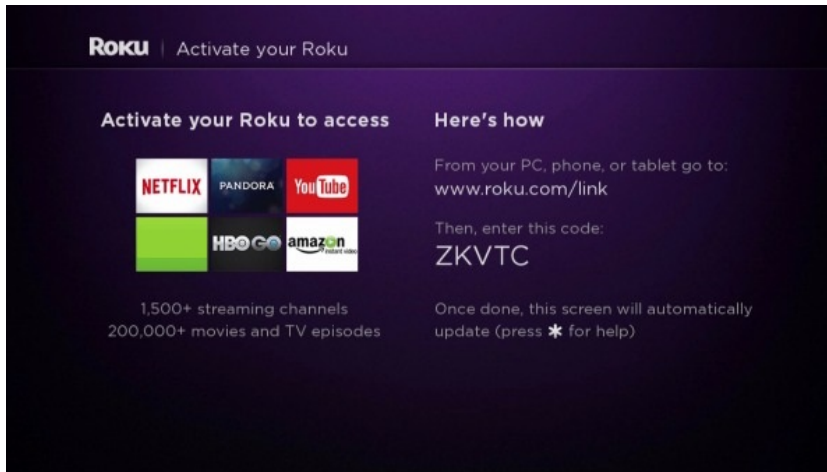


Use the provided code to link the Roku player.

(sample code shown, do not use)

Online Account Setup (Setting up your Roku Account)

On an Internet connected browser, go to roku.com/link and enter the provided code
(sample code shown, do not use)

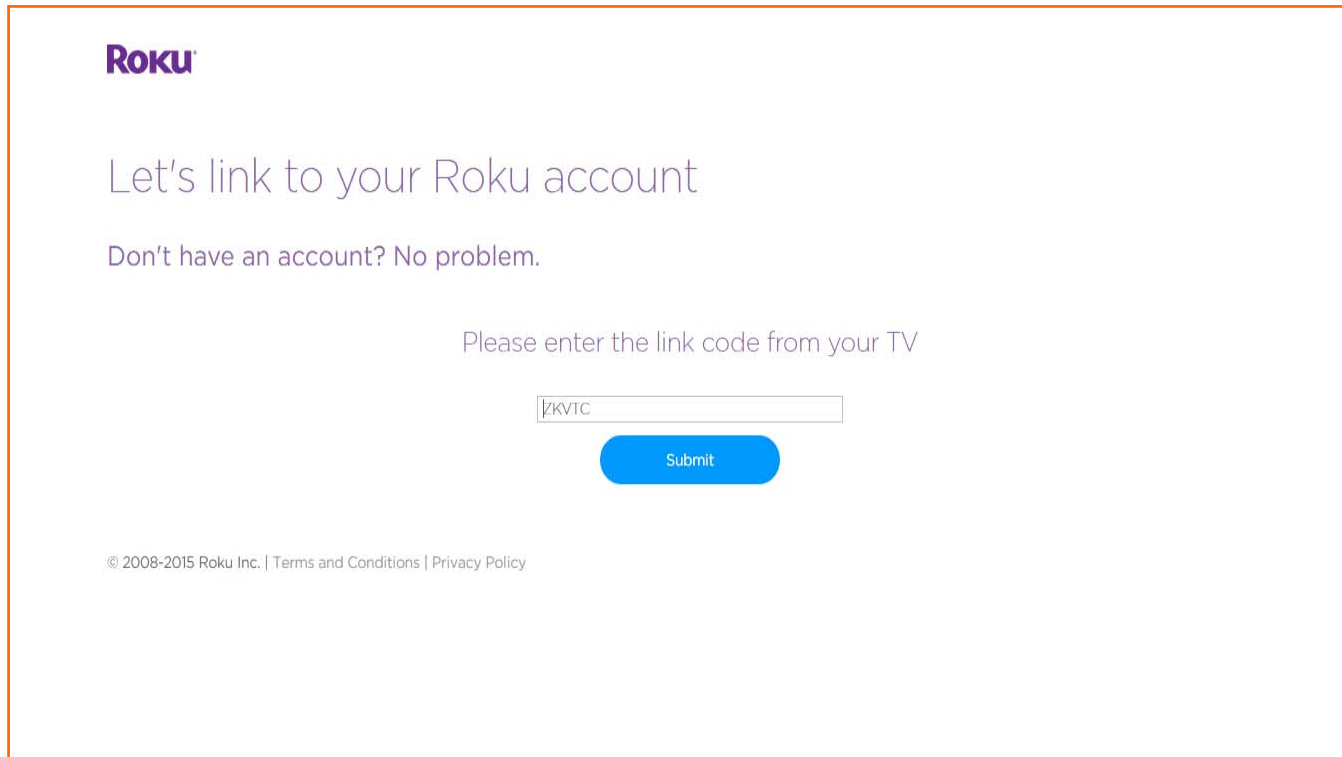A screenshot of the Roku account linking page. The page features the Roku logo in purple at the top left. Below the logo, the text reads "Let's link to your Roku account" in a light purple font, followed by "Don't have an account? No problem." in a smaller, lighter purple font. The main instruction is "Please enter the link code from your TV" in a grey font. Below this is a text input field containing the code "ZKVTG". A blue "Submit" button is positioned below the input field. At the bottom left, there is a small copyright notice: "© 2008-2015 Roku Inc. | Terms and Conditions | Privacy Policy".

Roku

Let's link to your Roku account

Don't have an account? No problem.

Please enter the link code from your TV

Submit

© 2008-2015 Roku Inc. | Terms and Conditions | Privacy Policy

Online Account Setup continued...

Use an existing Roku account or create a new one, it's free.

Roku

Let's link to your Roku account


Do you have a Roku account?

No, I need to create one

Yes, I already have one

On Screen Setup continued...


Create a new Roku Account or if you already have one, just log in and skip this step.

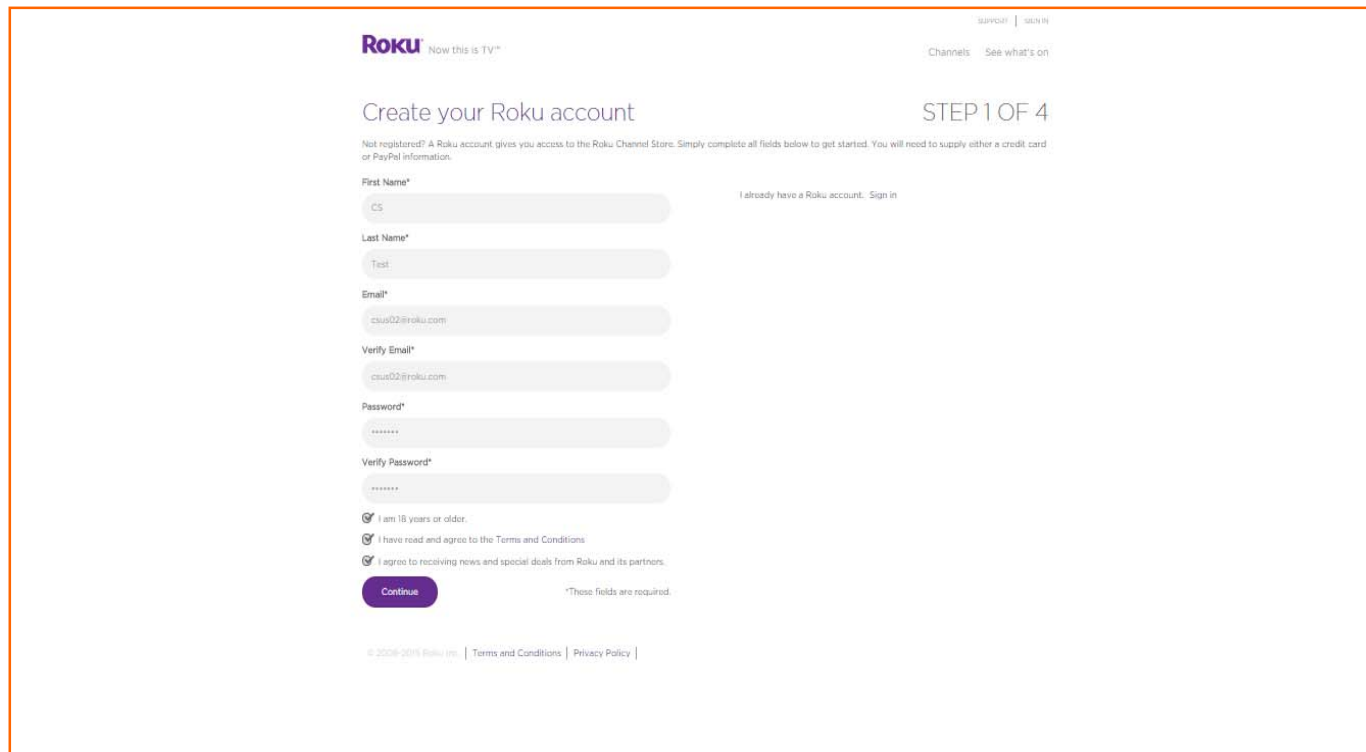

The screenshot shows the Roku account creation interface. At the top left is the Roku logo with the tagline "Now this is TV™". To the right are links for "support" and "sign in". Below these are "Channels" and "See what's on" links. The main heading is "Create your Roku account" followed by "STEP 1 OF 4". A note states: "Not registered? A Roku account gives you access to the Roku Channel Store. Simply complete all fields below to get started. You will need to supply either a credit card or PayPal information." The form includes fields for "First Name*" (containing "CS"), "Last Name*" (containing "Test"), "Email*" (containing "csus02@roku.com"), "Verify Email*" (containing "csus02@roku.com"), "Password*" (containing "*****"), and "Verify Password*" (containing "*****"). A link "I already have a Roku account. Sign in" is positioned to the right of the first name field. Below the form are three checkboxes: "I am 18 years or older.", "I have read and agree to the Terms and Conditions", and "I agree to receiving news and special deals from Roku and its partners." A purple "Continue" button is at the bottom left, and a note "*These fields are required." is at the bottom right. The footer contains "© 2008-2016 Roku, Inc. | Terms and Conditions | Privacy Policy |".

On Screen Setup continued...

Optional* Create a PIN. Using a PIN prevents accidental purchases.

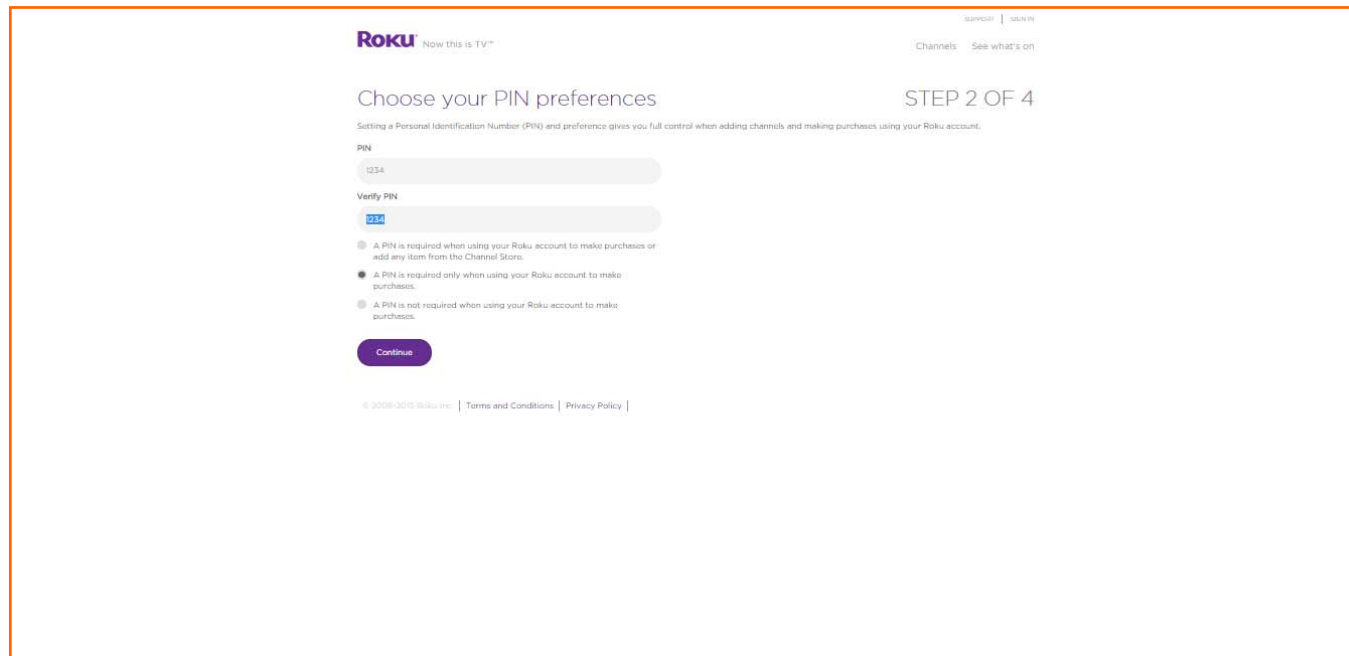

The screenshot shows the Roku account setup interface. At the top left is the Roku logo with the tagline "Now this is TV™". To the right are links for "SUPPORT" and "SIGN IN". Below these are links for "Channels" and "See what's on". The main heading is "Choose your PIN preferences" followed by "STEP 2 OF 4". A sub-heading reads: "Setting a Personal Identification Number (PIN) and preference gives you full control when adding channels and making purchases using your Roku account." There are two input fields: "PIN" with the value "0234" and "Verify PIN" with the value "0234". Below the fields are three radio button options: "A PIN is required when using your Roku account to make purchases or add any item from the Channel Store.", "A PIN is required only when using your Roku account to make purchases." (which is selected), and "A PIN is not required when using your Roku account to make purchases." At the bottom of the form is a purple "Continue" button. The footer contains the text "© 2008-2015 Roku, Inc. | Terms and Conditions | Privacy Policy |".

On Screen Setup continued...

Create payment method. Your card will not be charged unless you choose to order a channel or subscription.

Roku Now this is TV™

SEARCH | SIGN IN

Channels | See what's on

Provide payment information

STEP 3 OF 4

Roku is packed with hundreds of free channels. Adding a payment method now lets you easily rent/buy movies on demand, or try popular streaming channels.

Payment Method

VISA | Mastercard | Discover | PayPal

Card Number*

Expiration Date*

Month | Year

Security Code*

Billing Address Information

First Name*

Last Name*

Address 1*

Address 2

City*


State*

Easy. Simple. Enjoy

- 1 Easily rent or buy movies and shows on demand
- 2 Simple sign-up for popular streaming channels
- 3 Confirm each purchase with a PIN
- 4 Enjoy free trials of several movie and TV services

*Some channels require payment or subscription to access content. For streaming, Roku® requires a subscription to access titles in the library assuming settings. Channel availability varies by region and country and content may not be available in all locations. Roku products are sold. All free trials are subject to promotional-specific terms and conditions.

On Screen Setup Last Page. You made it!

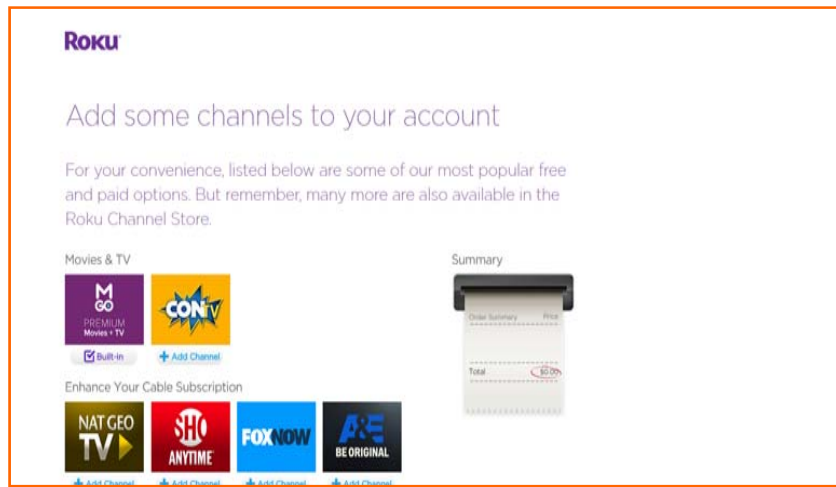

Roku

Add some channels to your account

For your convenience, listed below are some of our most popular free and paid options. But remember, many more are also available in the Roku Channel Store.

Movies & TV

- M GO PREMIUM Movies + TV (Built-in)
- CON TV (+ Add Channel)

Enhance Your Cable Subscription


- NAT GEO TV (+ Add Channel)
- SHO ANYTIME (+ Add Channel)
- FOXNOW (+ Add Channel)
- A&E BE ORIGINAL (+ Add Channel)

Summary

Order Summary	Price
Total	\$0.00

Explore additional channels to get started.

You can always come back here later and add channels and explore!

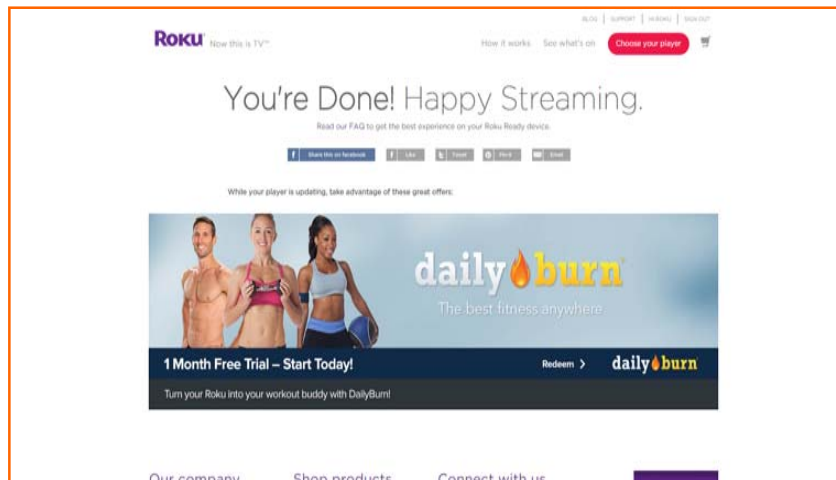


Roku How this is TV™

How it works See what's on Choose your player

You're Done! Happy Streaming.

Read our FAQ to get the best experience on your Roku Ready device.

While your player is updating, take advantage of these great offers:



daily burn
The best fitness anywhere.

1 Month Free Trial – Start Today! Redeem > **daily burn**

Turn your Roku into your workout buddy with DailyBurn!

Our company Shop products Connect with us

That's it, you are done! Next we will need to add your EZVideo channel .

ADDING YOUR EZVIDEO CHANNEL: Click on **Add a Channel**

My Account

Account Information

Account Address:
Estacada
OR 97023
Password: *****

Update

PIN Preference

A PIN is **required** only when using your Roku account to make purchases.

Update

Payment Method

Visa *****
Exp. date 02/2017
Estacada OR 97023

Update

Manage Account

Add a Channel >

Enter an invitation code to add a private or beta channel to your account.

Manage Your Subscriptions >

View and manage your Roku-billed subscriptions.

View & Activate Free Trial Offers >

View and activate exciting offers from Roku Partners

View Your Purchase History >

See past purchases and invoices.

Deactivate Account >

Close your Roku account and unlink your devices.

ADDING YOUR EZVIDEO CHANNEL continued...

Then type **EZVIDEO** where it says channel access code and click “Add Channel”

Add Channel

Enter a channel access code to add a public channel, a private channel or a beta channel to your Roku account.

Channel access code


Add Channel

Cancel

© 2008-2015 Roku Inc. | [Terms and Conditions](#) | [Privacy Policy](#) | [Developer Site](#) |

Once the channel is added to the account, go back to the Roku player, select settings and update software. This will prompt the box to look for any changes to the account and will pick up new channels that were requested. In this instant the EZVideo Channel

Roku View and the EZVideo Channel. You can move the channel to the upper left corner by holding down the star (*) key on your remote and then using the “move channel” option

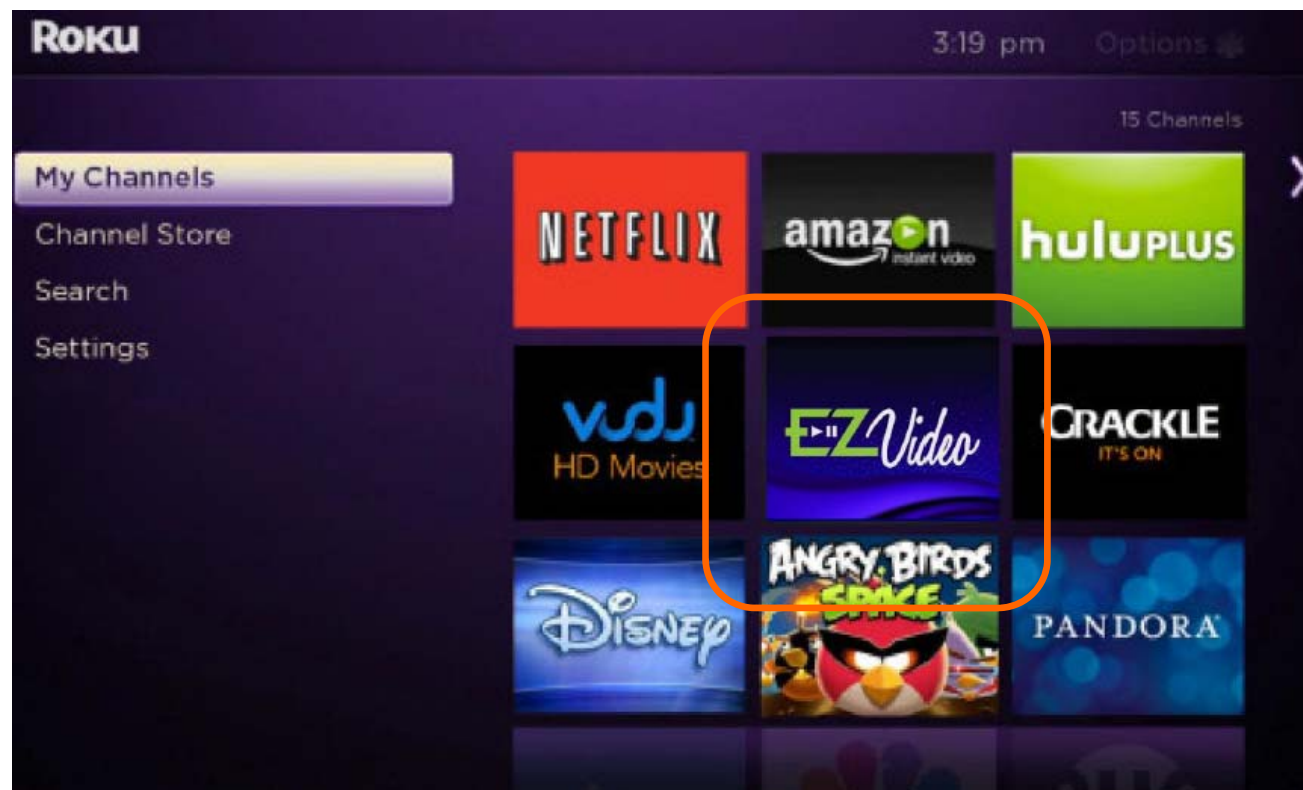

Happy Streaming!

We have one more step!

- Go to your Roku EZVideo Channel
- When prompted, enter the Nova Account Number. This is a one time step when setting up a new Roku box.
- Happy Streaming!

